



Adpt-A16-OM32 Adaptor Map

NOTE: This diagram shows the channel mapping within the adaptor itself, and is not a map of the final pin-out. Re-mapping must be performed to obtain the correct pin-out.

A16
Female
(Top view)

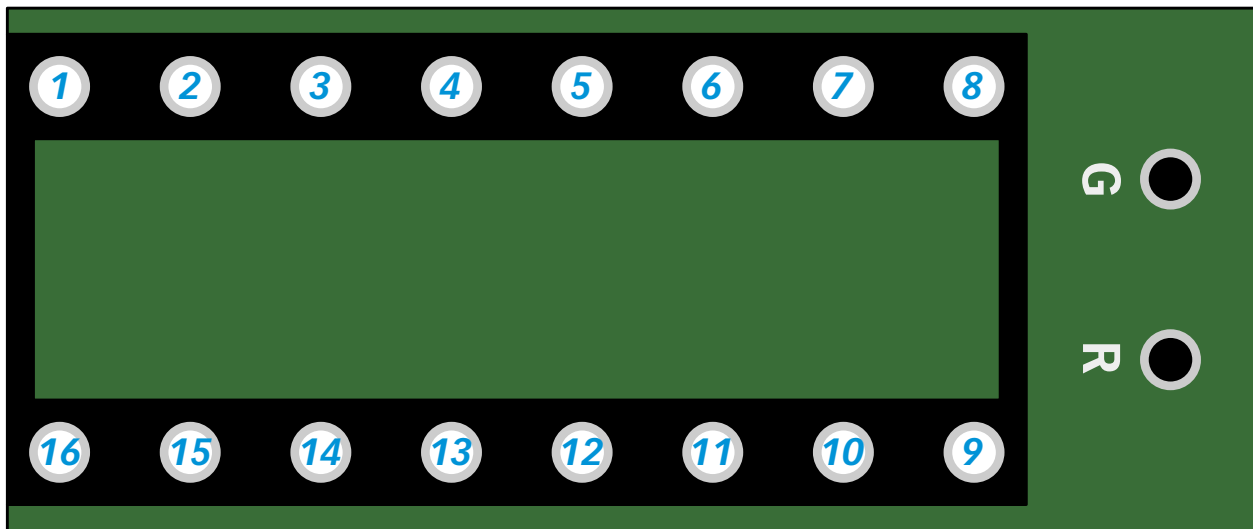

OM32
Connector

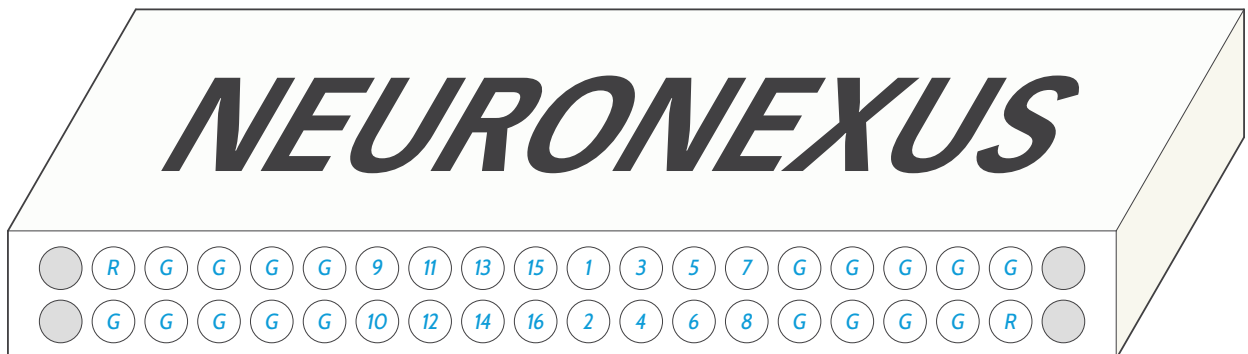

NOTE: Print may vary on the Omnetics connector.

- Versions with one side with "Omnetics" printed and one blank side: the "Omnetics" side is oriented up
- Versions with one side with "NeuroNexus" printed and one side with "Omnetics" and a batch number printed: the "NeuroNexus" side is oriented up
- Print may be oriented toward user (shown above) or away from user

G = Ground
R = Reference